LifeFitness

UPRIGHT BIKE 95CE

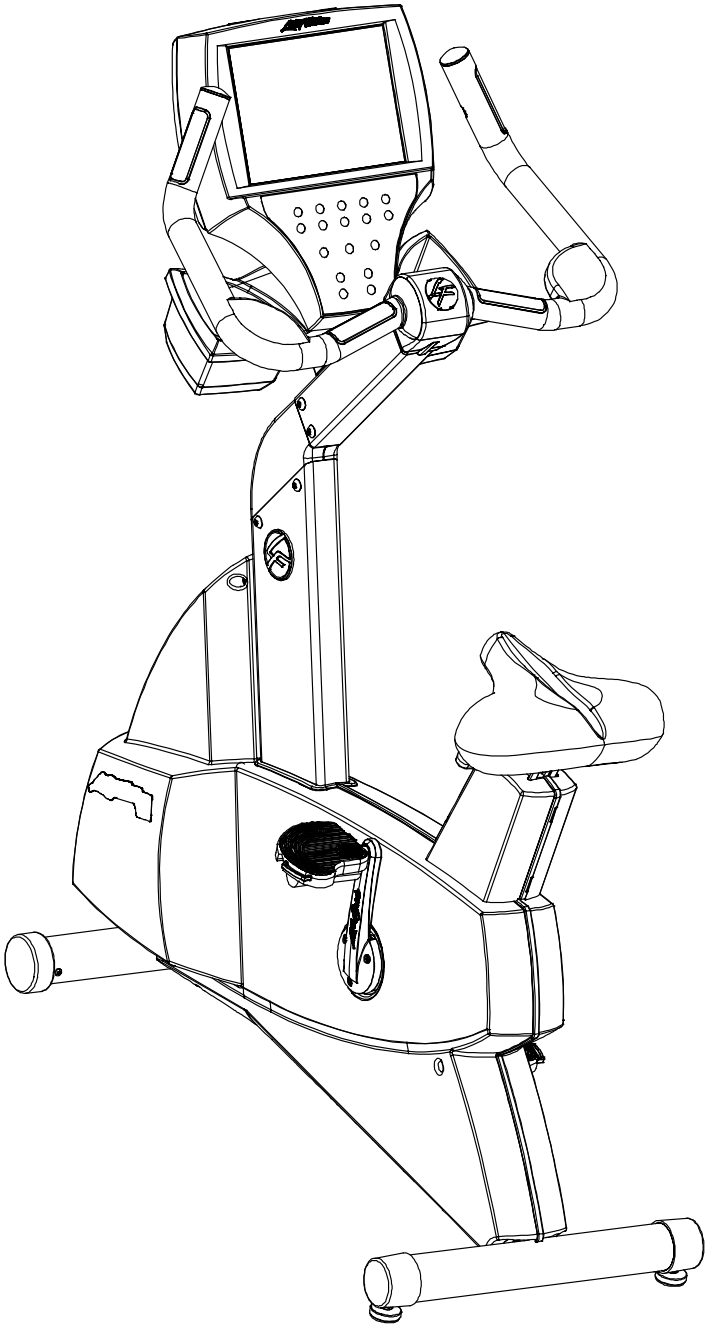

Customer Support Services
PARTS MANUAL

OPERATOR MANUAL	M051-00K63-A088
SERVICE MANUAL	M051-00K63-B012
POWER-SUPPLY: 12V; 4.5A	118E-00001-0161
Without Line cord	
LINE-CORD: DOM. 10A 125V	0017-00003-0704
LINE-CORD: CON 10A 250V	0017-00003-0691
LINE-CORD: 10A; U.K	0017-00003-0889
LINE-CORD: AUSTRALIA	0017-00003-0918
HARDWARE Kit	GK63-00002-0056

Page

CONSOLE ASSEMBLY 4

ALTERNATOR AND PULLEY 5

CRANK SHAFT AND BEARINGS 6

INTERMEDIATE SHAFT AND BEARINGS 7

SEAT LATCH ASSEMBLY 8

SEAT POST ASSEMBLY 9

SEAT POST SHROUDS 10

IDLER BRACKET ASSEMBLY 11

CONSOLE SUPPORT ASSEMBLY 12

LEFT SIDE SHROUD & CRANKARM 13

RIGHT SIDE SHROUD & CRANKARM 14

PCB MOUNTING BRACKET 15

FRONT WHEEL ASSEMBLY 16

RESISTOR ASSEMBLY 17

HANDLEBAR ASSEMBLY 18

BELTS 19

CABLES 20

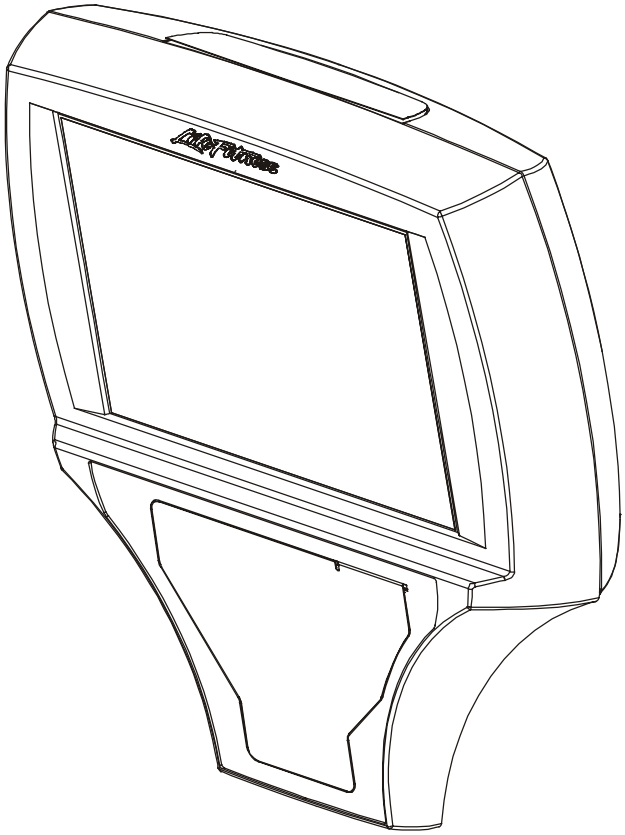

CONSOLE ASSEMBLY	
GK63-00002-0045	KIT: SERVICE CONSOLE NTSC ENG
GK63-00002-0046	KIT: SERVICE CONSOLE NTSC SPN
GK63-00002-0047	KIT: SERVICE CONSOLE NTSC JAP
GK63-00002-0048	KIT: SERVICE CONSOLE NTSC FRN
GK63-00002-0049	KIT: SERVICE CONSOLE PAL ENG
GK63-00002-0050	KIT: SERVICE CONSOLE PAL GER
GK63-00002-0051	KIT: SERVICE CONSOLE PAL SPN
GK63-00002-0052	KIT: SERVICE CONSOLE PAL FRN
GK63-00002-0053	KIT: SERVICE CONSOLE PAL ITL

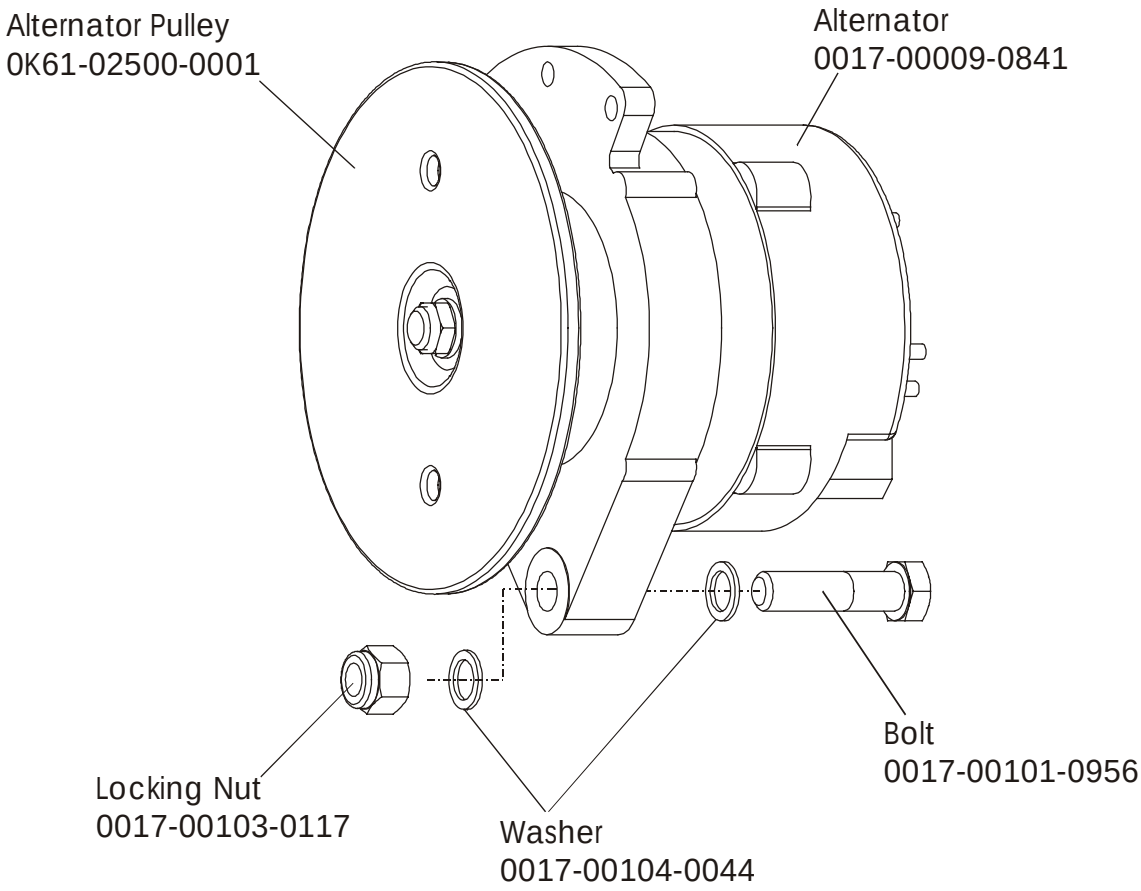
Alternator Pulley
0K61-02500-0001
Alternator
0017-00009-0841
Bolt
0017-00101-0956
Locking Nut
0017-00103-0117
Washer
0017-00104-0044

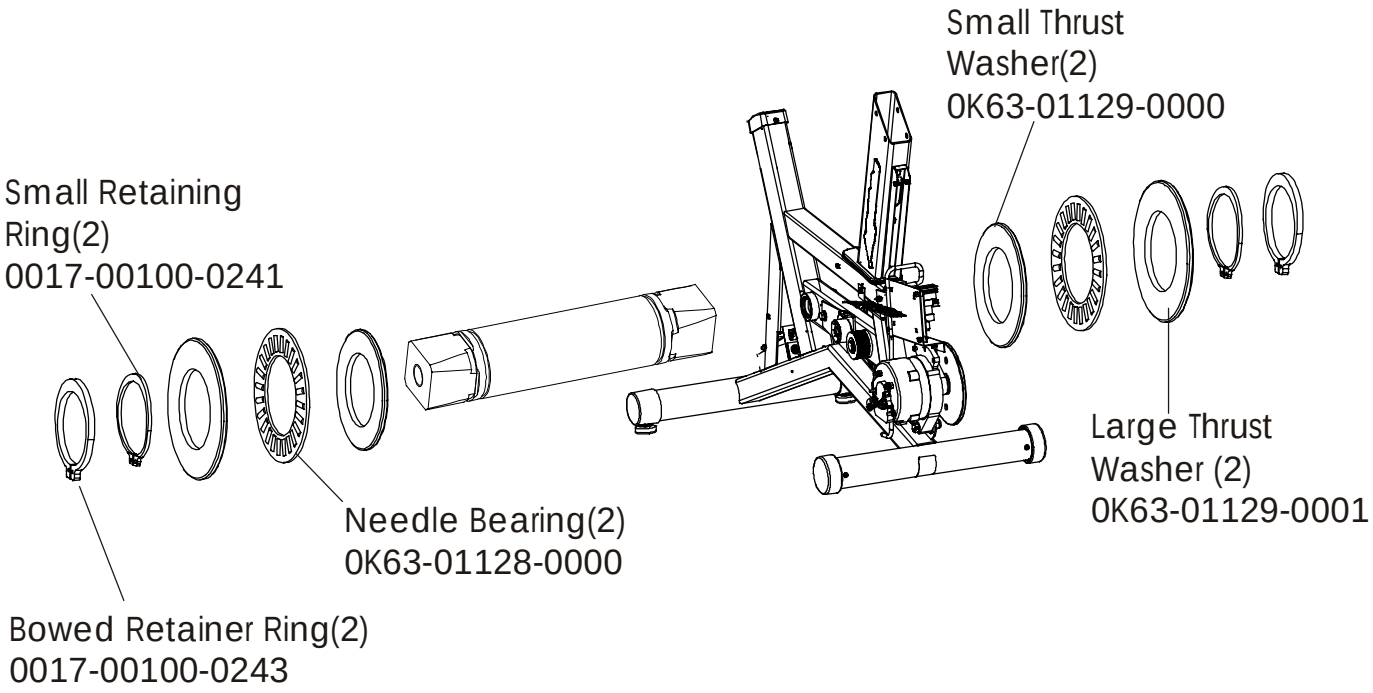

Crank Shaft & Bearing Kit - GK63-00002-0006
(All items on this page are included in the kit.)

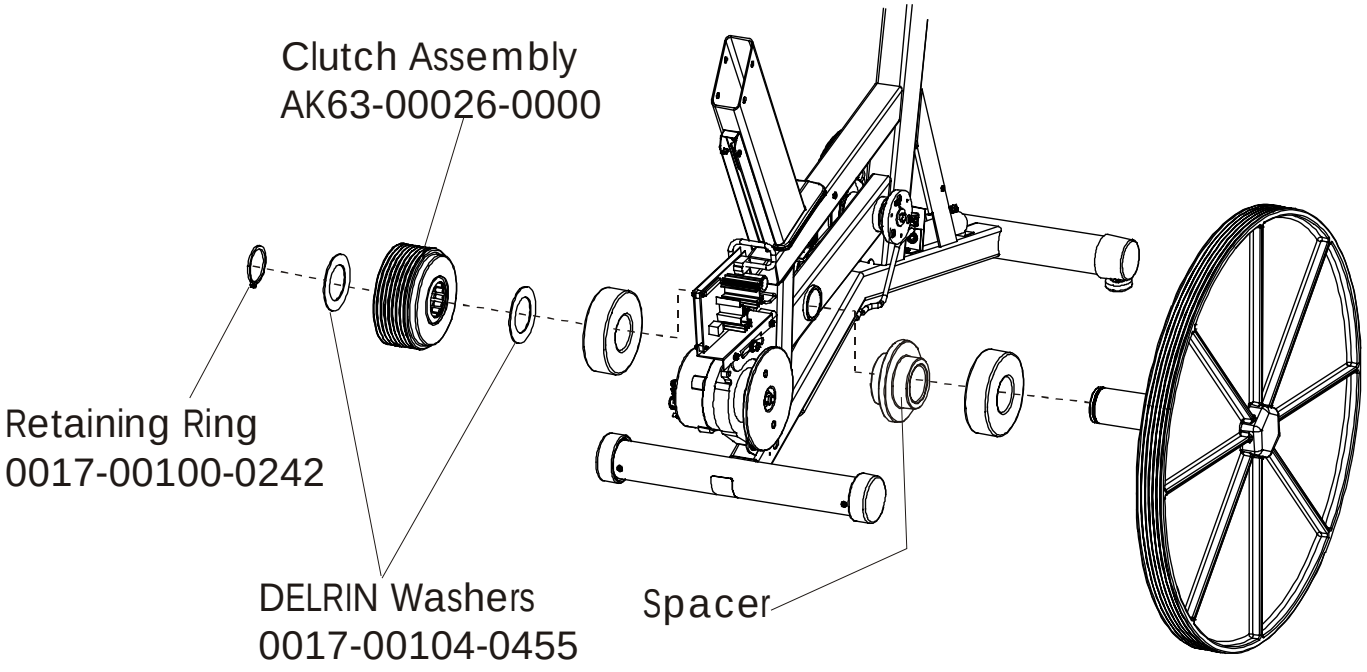

Intermediate Shaft & Bearing Kit - GK63-00002-0007
(All items on this page are included in the kit.)

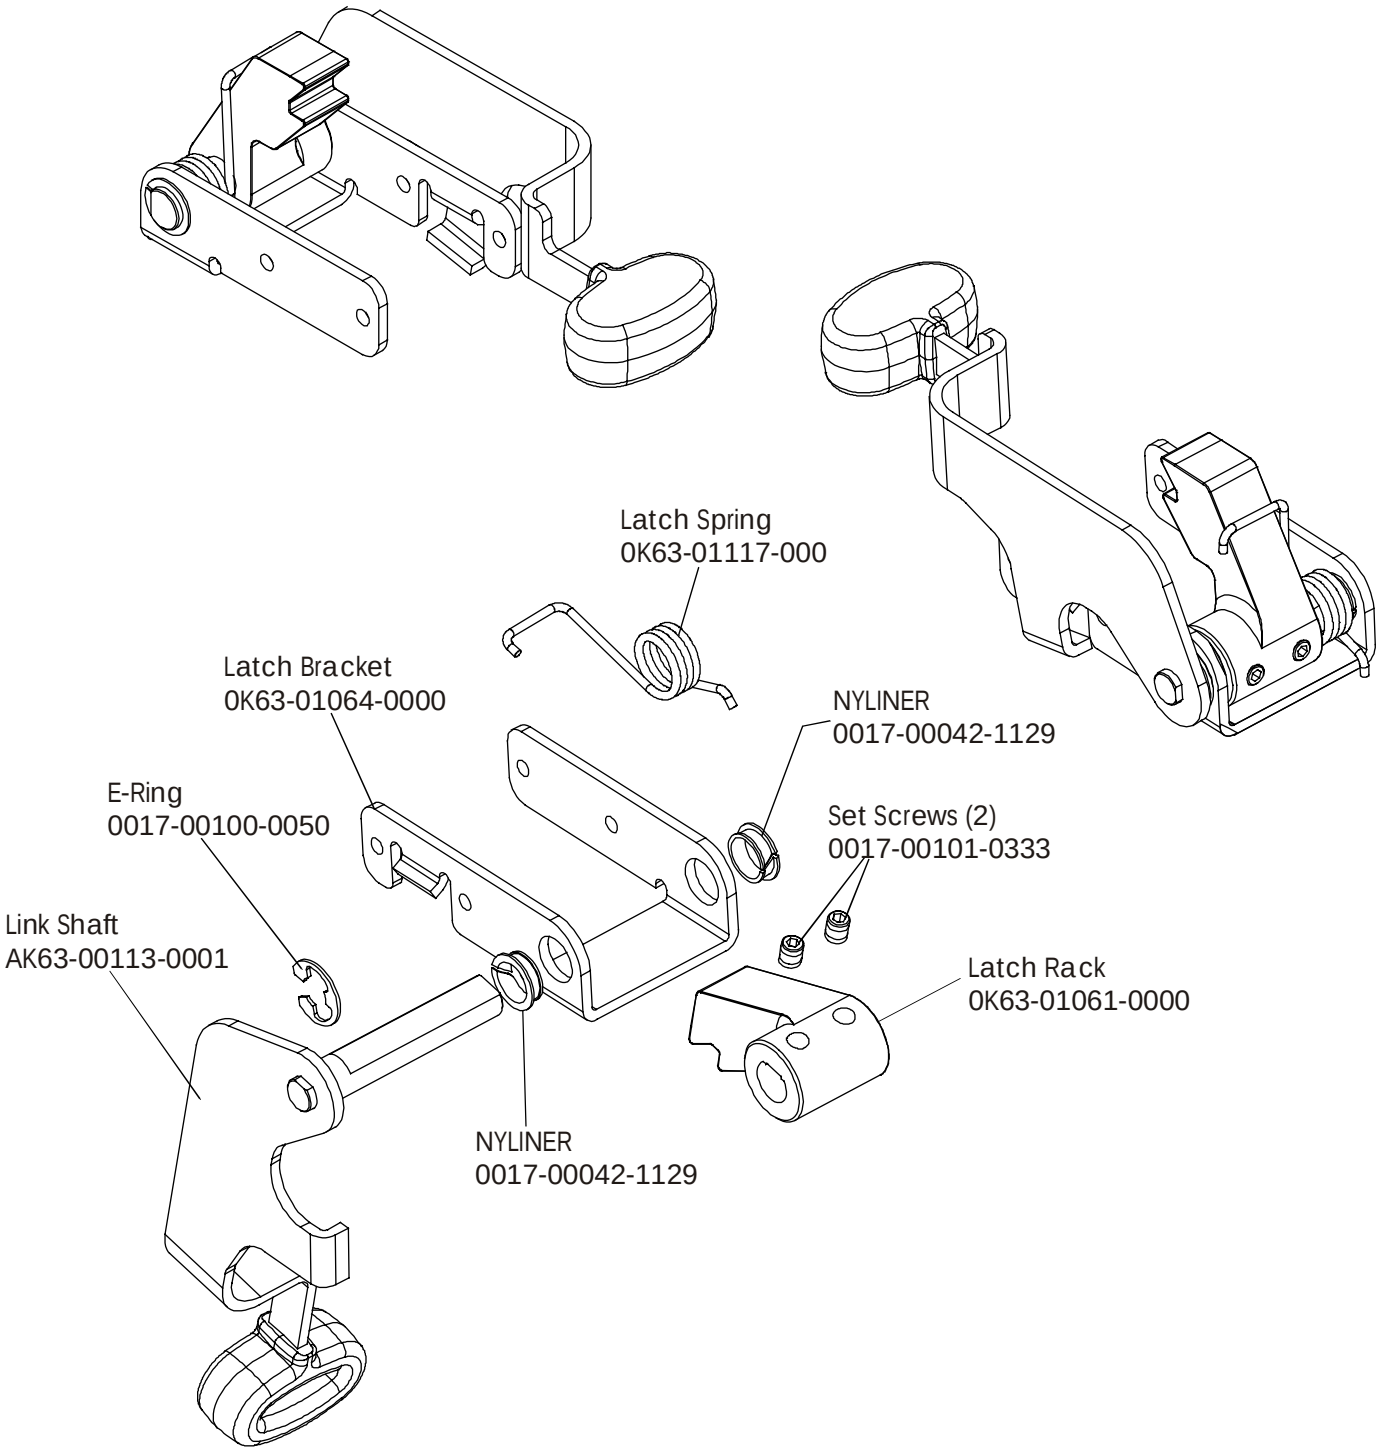
Latch Spring
0K63-01117-000
Latch Bracket
0K63-01064-0000
NYLINER
0017-00042-1129
E-Ring
0017-00100-0050
Set Screws (2)
0017-00101-0333
Link Shaft
AK63-00113-0001
Latch Rack
0K63-01061-0000
NYLINER
0017-00042-1129

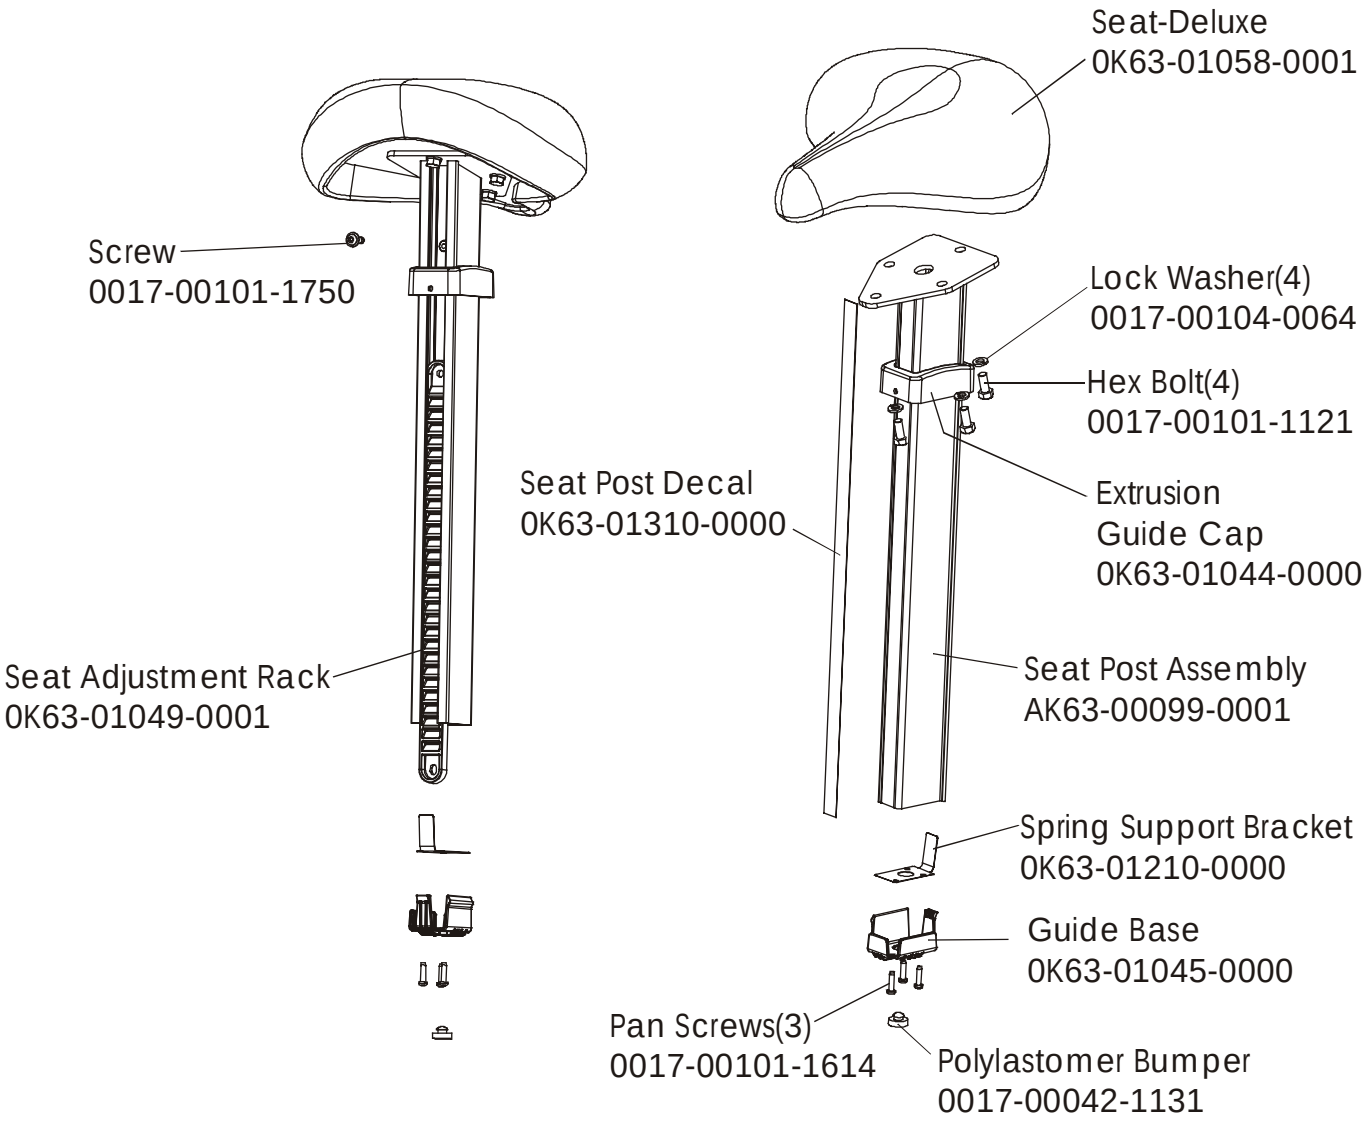
Seat-Deluxe
0K63-01058-0001
Screw
0017-00101-1750
Lock Washer(4)
0017-00104-0064
Hex Bolt(4)
0017-00101-1121
Seat Post Decal
0K63-01310-0000
Extrusion
Guide Cap
0K63-01044-0000
Seat Adjustment Rack
0K63-01049-0001
Seat Post Assembly
AK63-00099-0001
Spring Support Bracket
0K63-01210-0000
Guide Base
0K63-01045-0000
Pan Screws(3)
0017-00101-1614
Polylastomer Bumper
0017-00042-1131

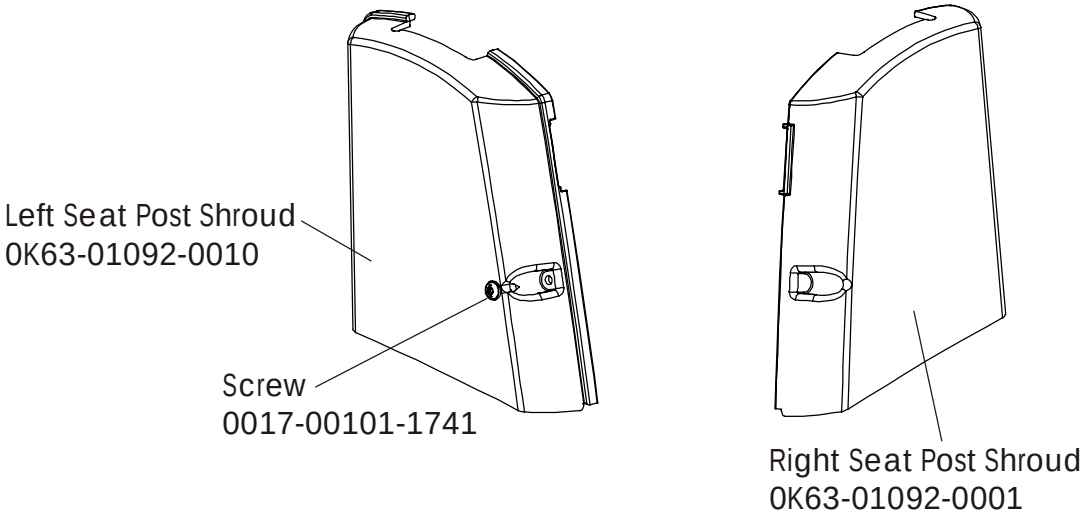
Left Seat Post Shroud
0K63-01092-0010
Screw
0017-00101-1741
Right Seat Post Shroud
0K63-01092-0001

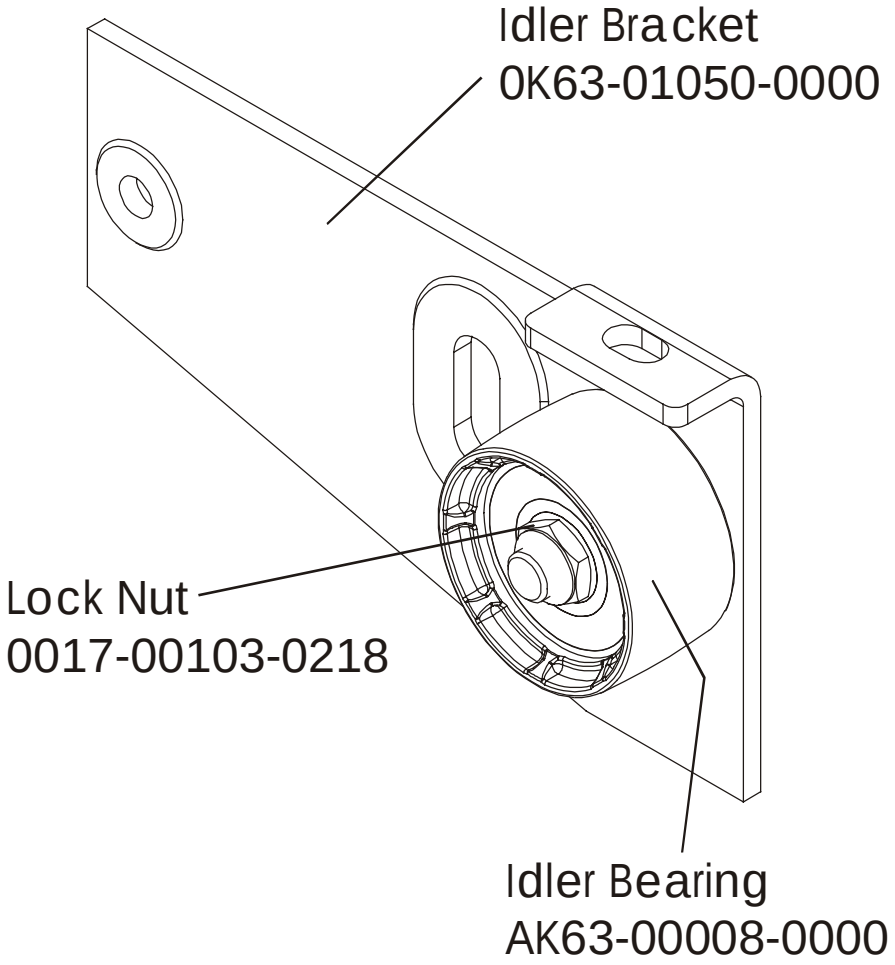
Idler Bracket
0K63-01050-0000
Lock Nut
0017-00103-0218
Idler Bearing
AK63-00008-0000

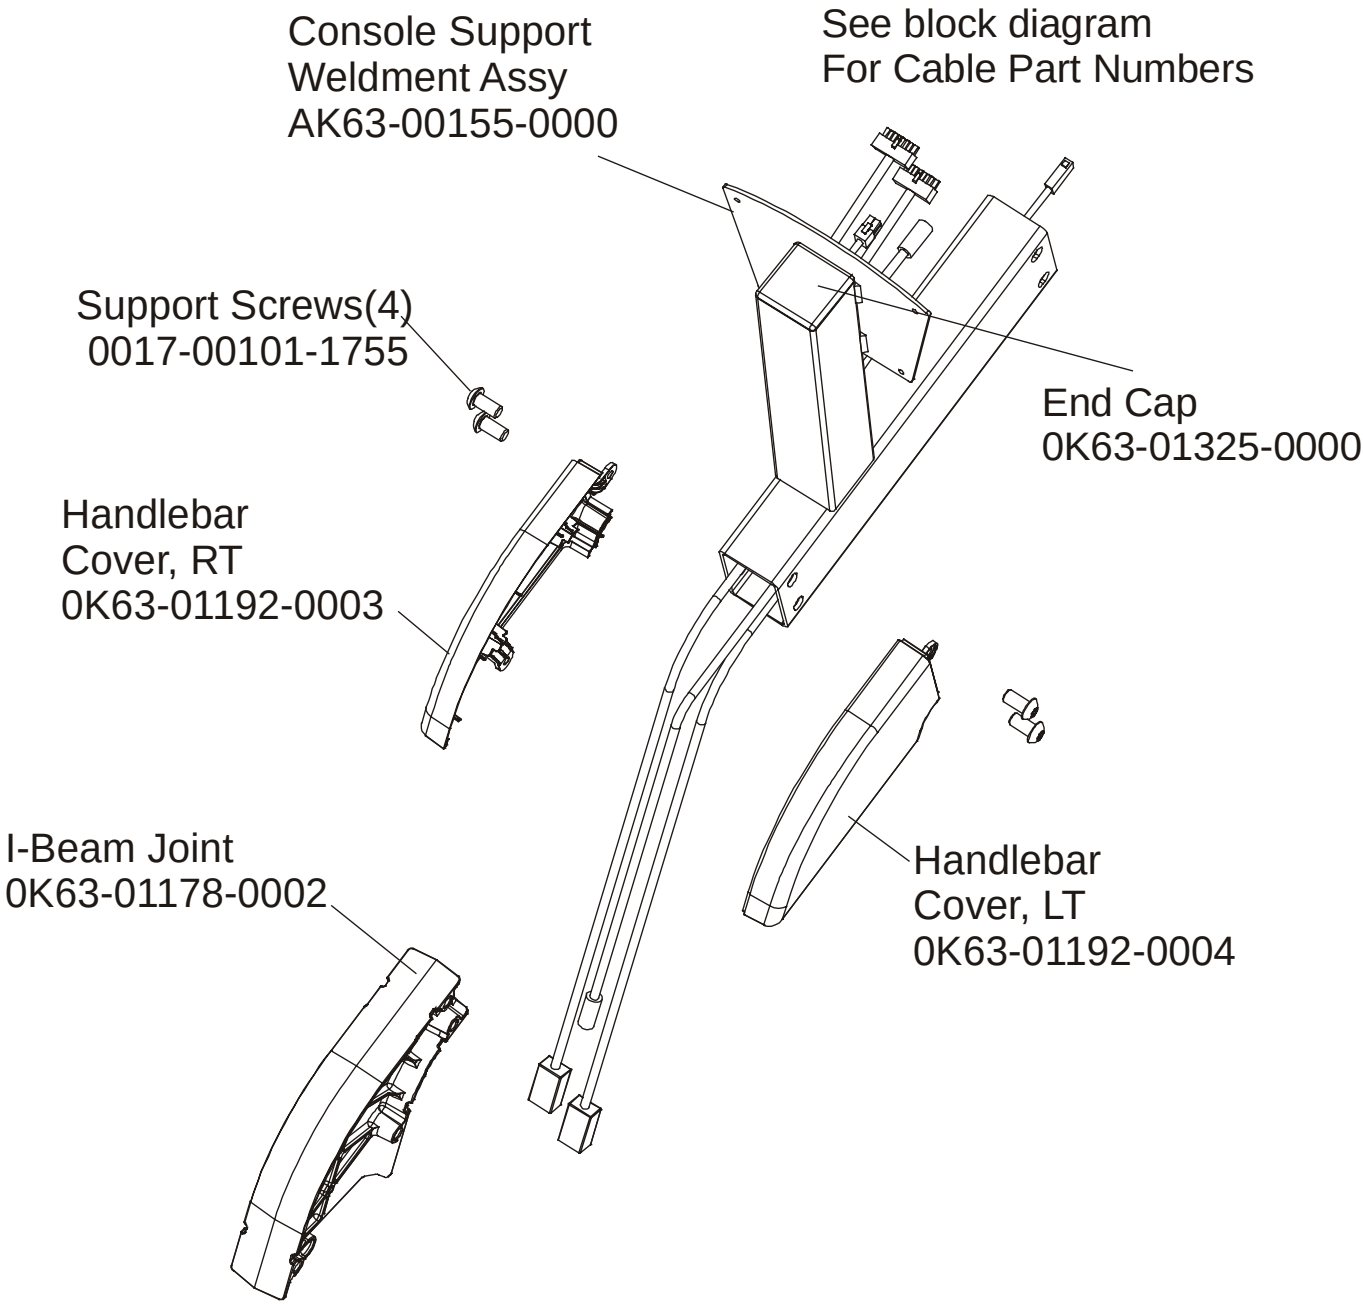
Console Support
Weldment Assy
AK63-00155-0000
See block diagram
For Cable Part Numbers
Support Screws(4)
0017-00101-1755
End Cap
0K63-01325-0000
Handlebar
Cover, RT
0K63-01192-0003
I-Beam Joint
0K63-01178-0002
Handlebar
Cover, LT
0K63-01192-0004

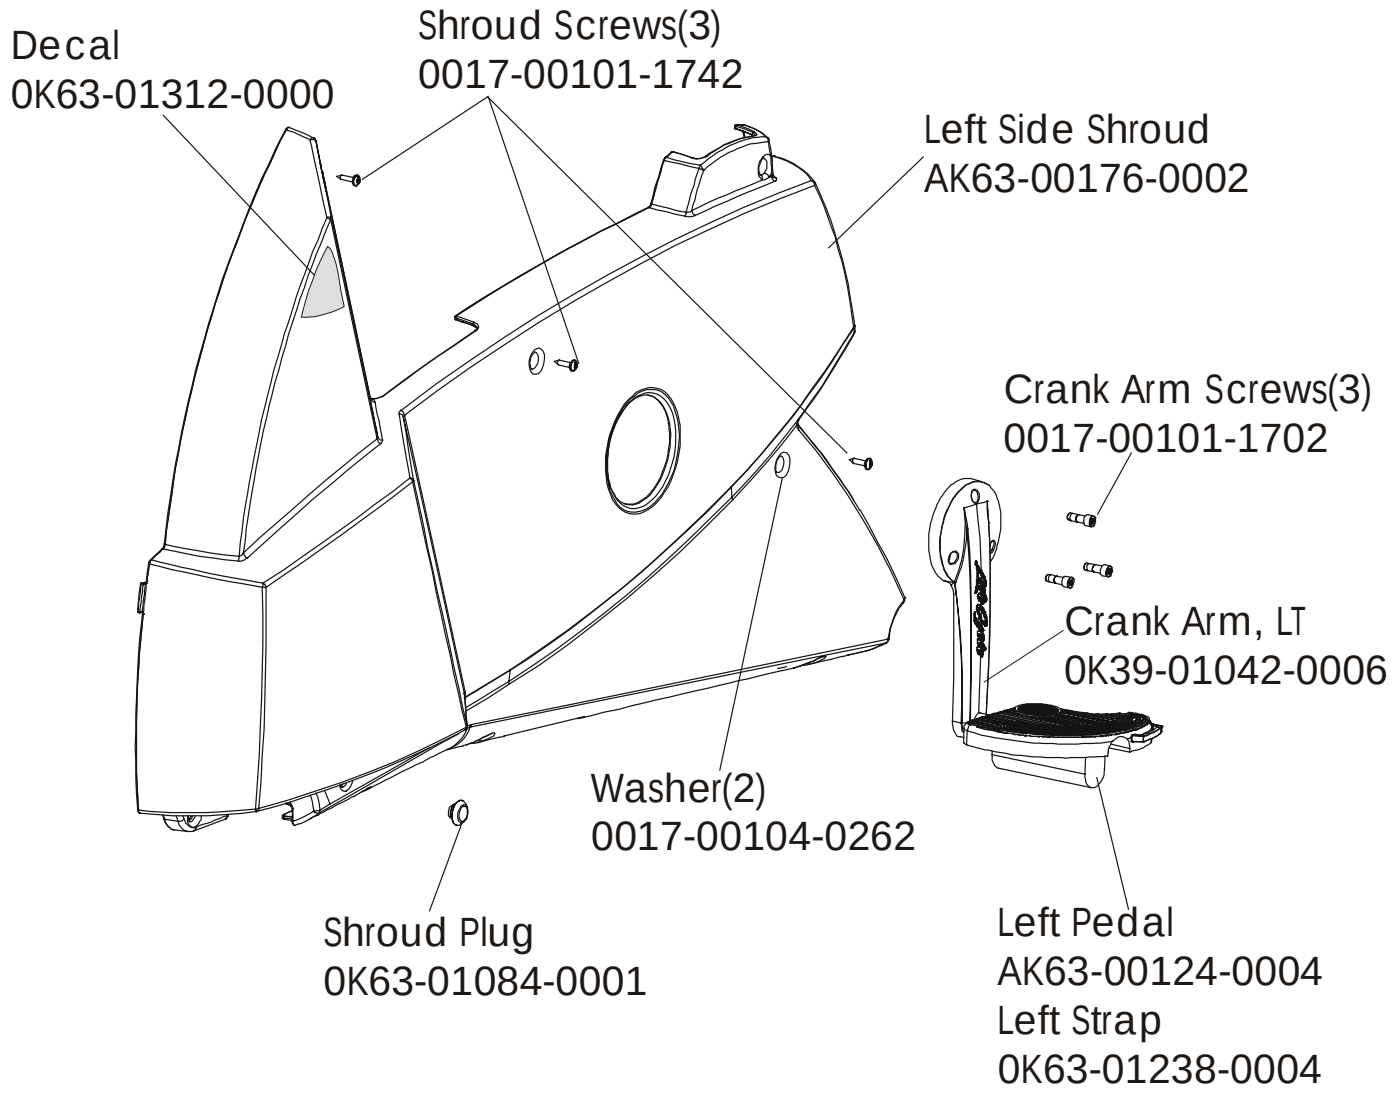
Decal
0K63-01312-0000
Shroud Screws(3)
0017-00101-1742
Left Side Shroud
AK63-00176-0002
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, LT
0K39-01042-0006
Washer(2)
0017-00104-0262
Shroud Plug
0K63-01084-0001
Left Pedal
AK63-00124-0004
Left Strap
0K63-01238-0004

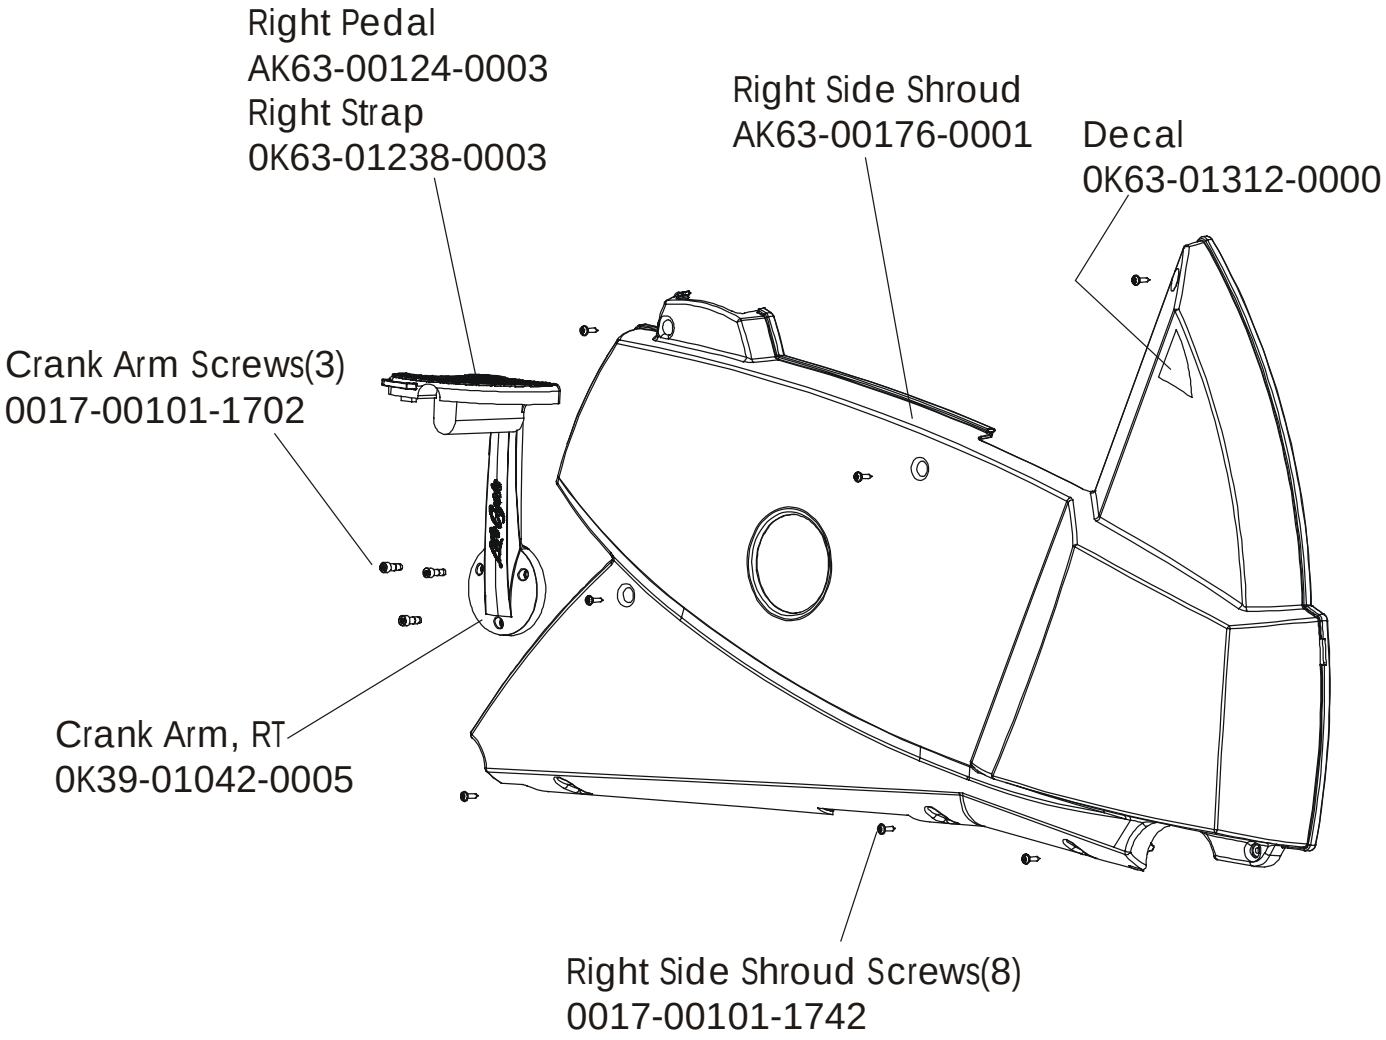
Right Pedal
AK63-00124-0003
Right Strap
0K63-01238-0003
Right Side Shroud
AK63-00176-0001
Decal
0K63-01312-0000
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, RT
0K39-01042-0005
Right Side Shroud Screws(8)
0017-00101-1742

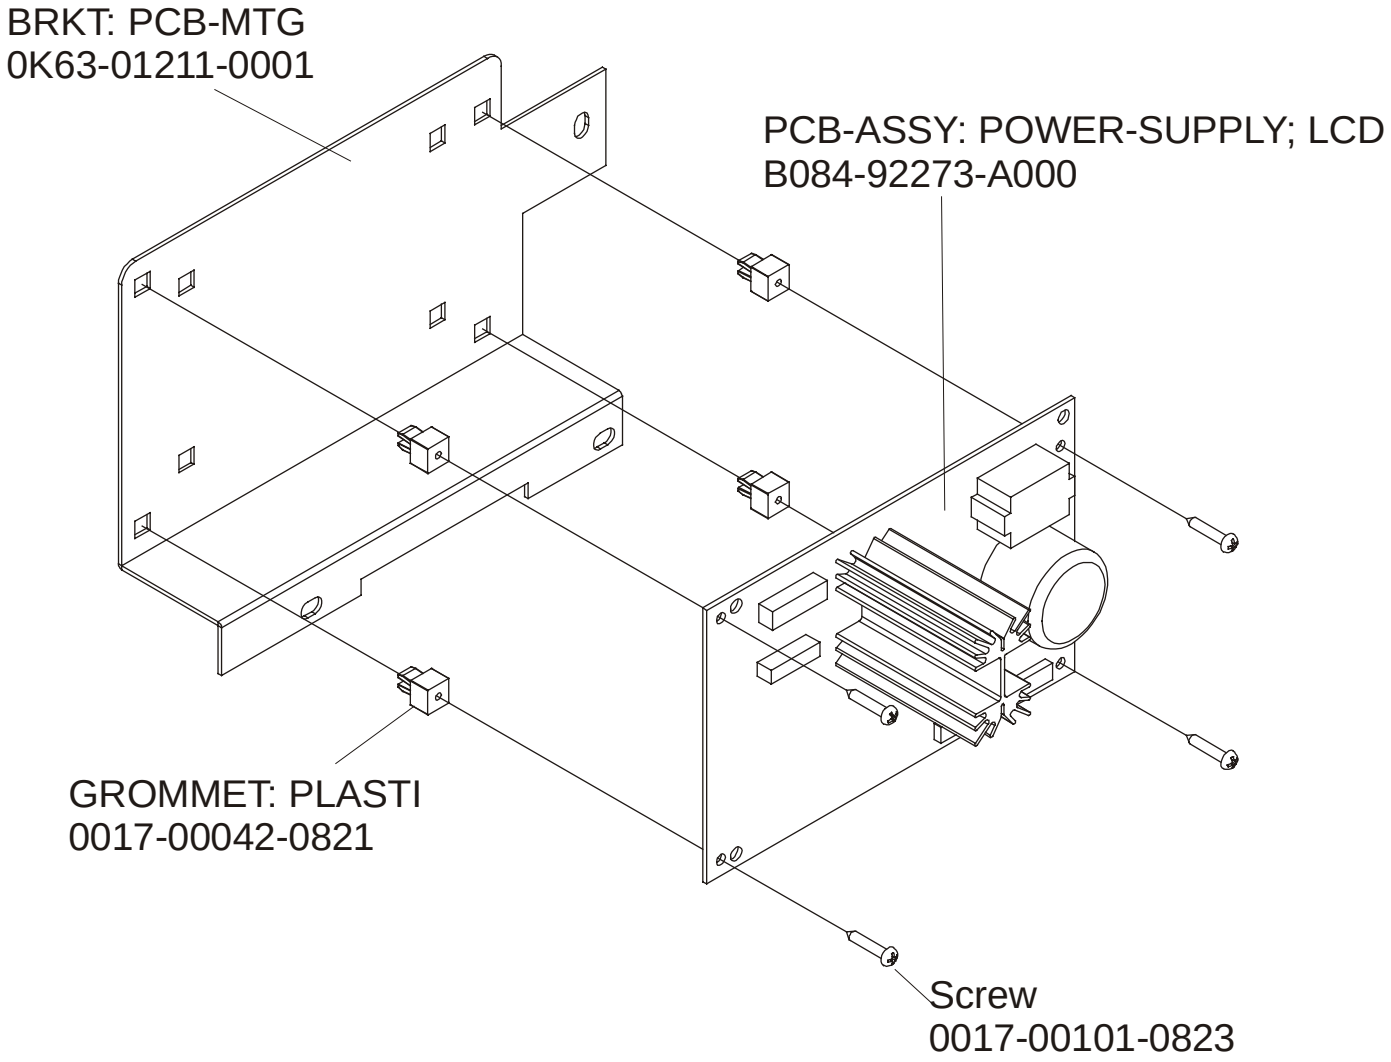
BRKT: PCB-MTG
0K63-01211-0001
PCB-ASSY: POWER-SUPPLY; LCD
B084-92273-A000
GROMMET: PLASTI
0017-00042-0821
Screw
0017-00101-0823

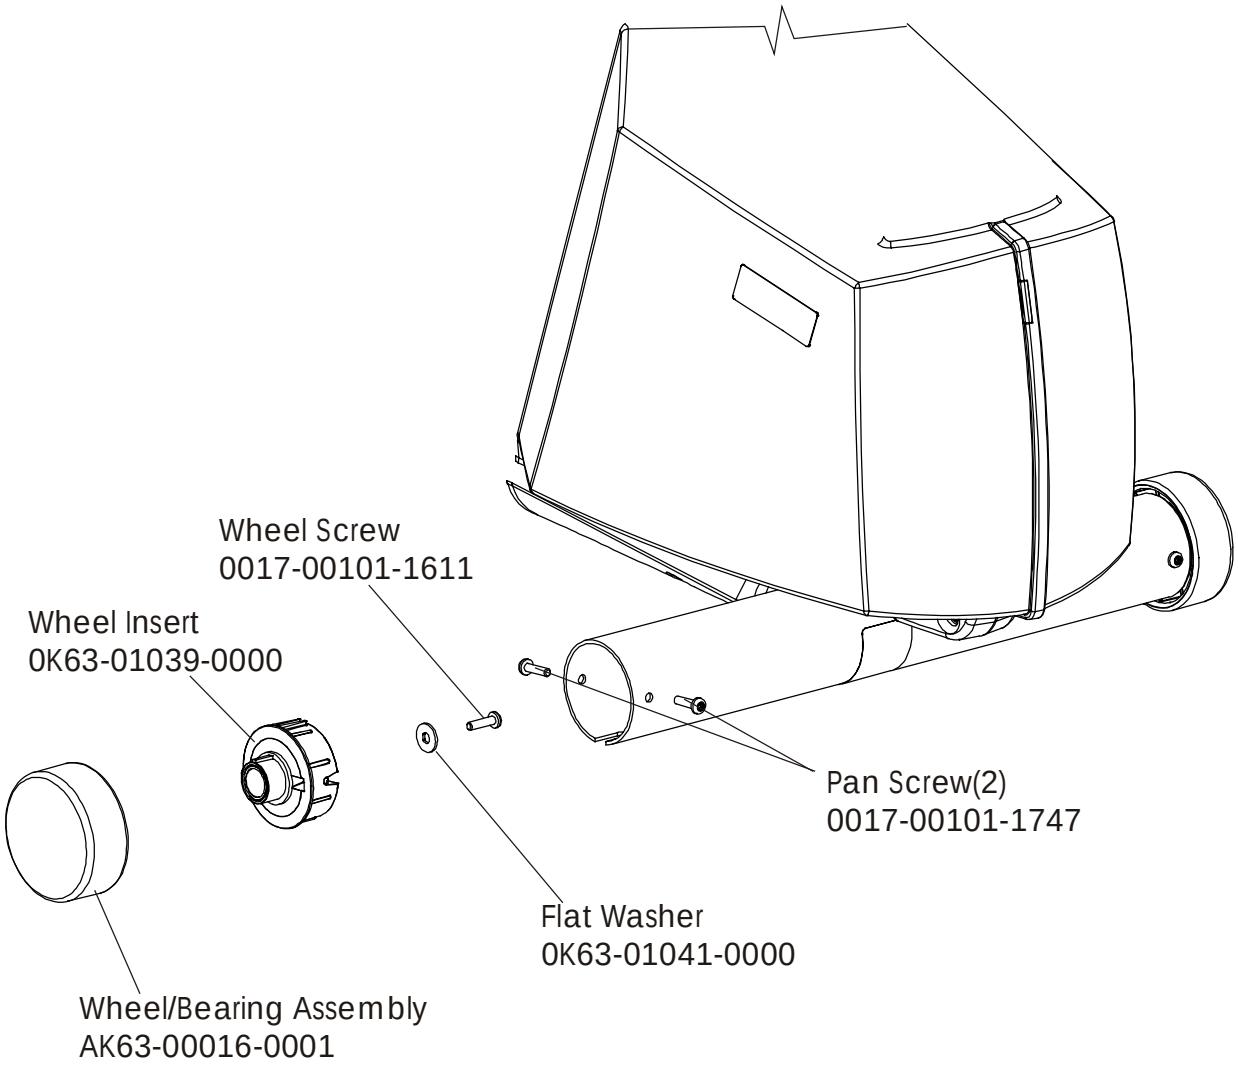
Wheel Screw
0017-00101-1611
Wheel Insert
0K63-01039-0000
Pan Screw(2)
0017-00101-1747
Flat Washer
0K63-01041-0000
Wheel/Bearing Assembly
AK63-00016-0001

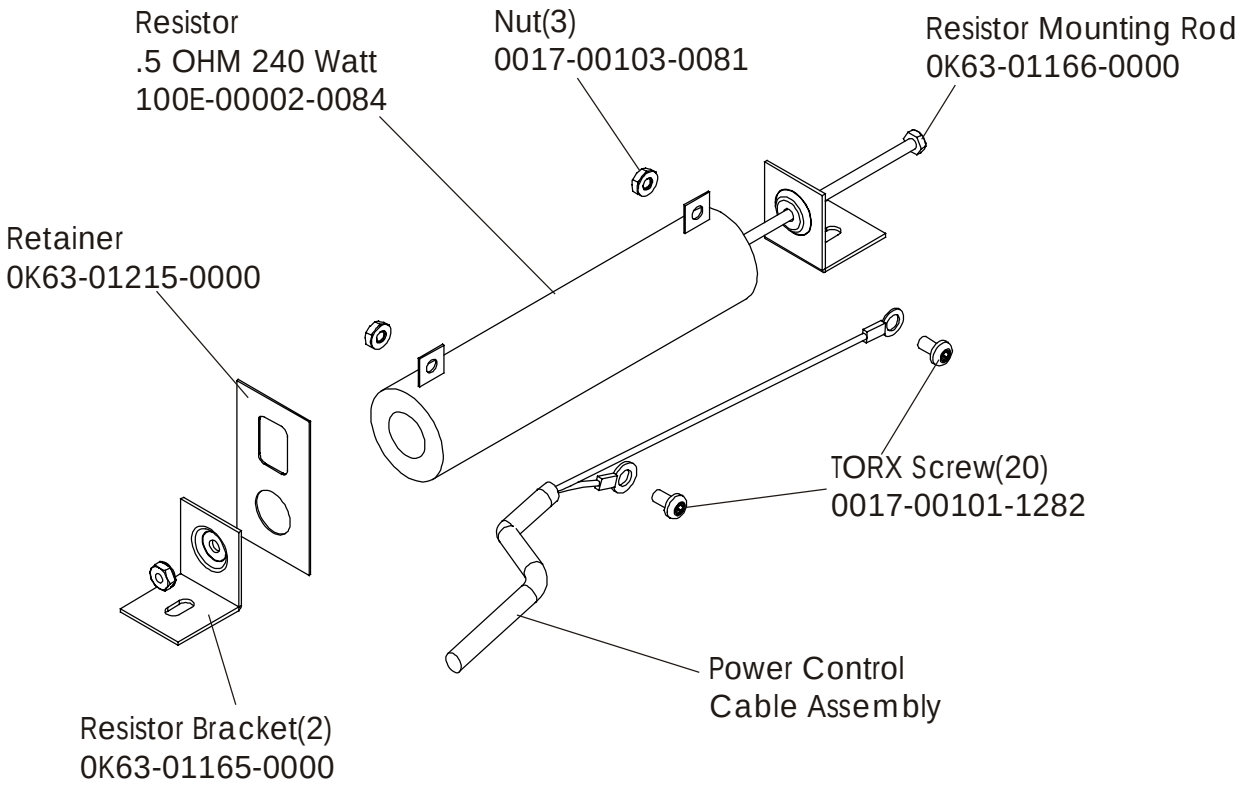
Resistor
.5 OHM 240 Watt
100E-00002-0084
Nut(3)
0017-00103-0081
Resistor Mounting Rod
0K63-01166-0000
Retainer
0K63-01215-0000
TORX Screw(20)
0017-00101-1282
Power Control
Cable Assembly
Resistor Bracket(2)
0K63-01165-0000

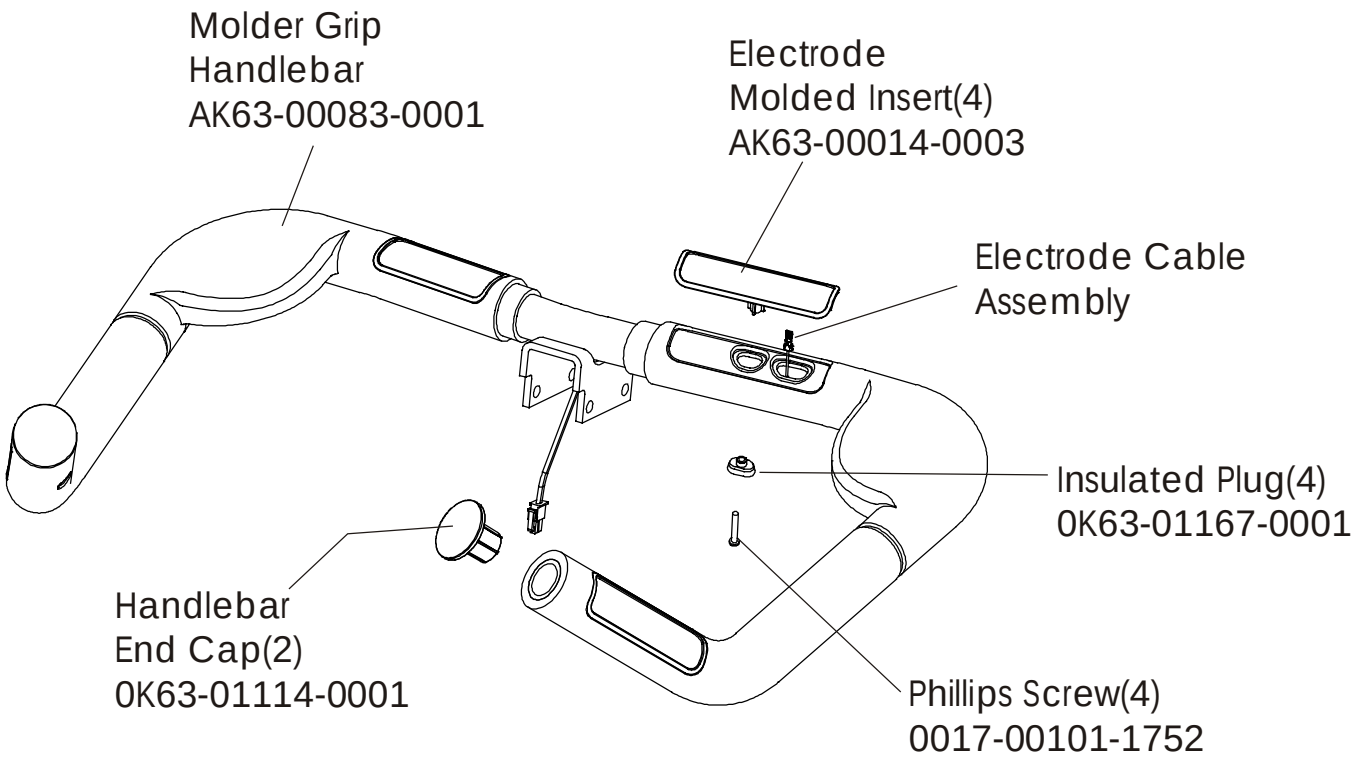
Molder Grip
Handlebar
AK63-00083-0001
Electrode
Molded Insert(4)
AK63-00014-0003
Electrode Cable
Assembly
Insulated Plug(4)
0K63-01167-0001
Handlebar
End Cap(2)
0K63-01114-0001
Phillips Screw(4)
0017-00101-1752

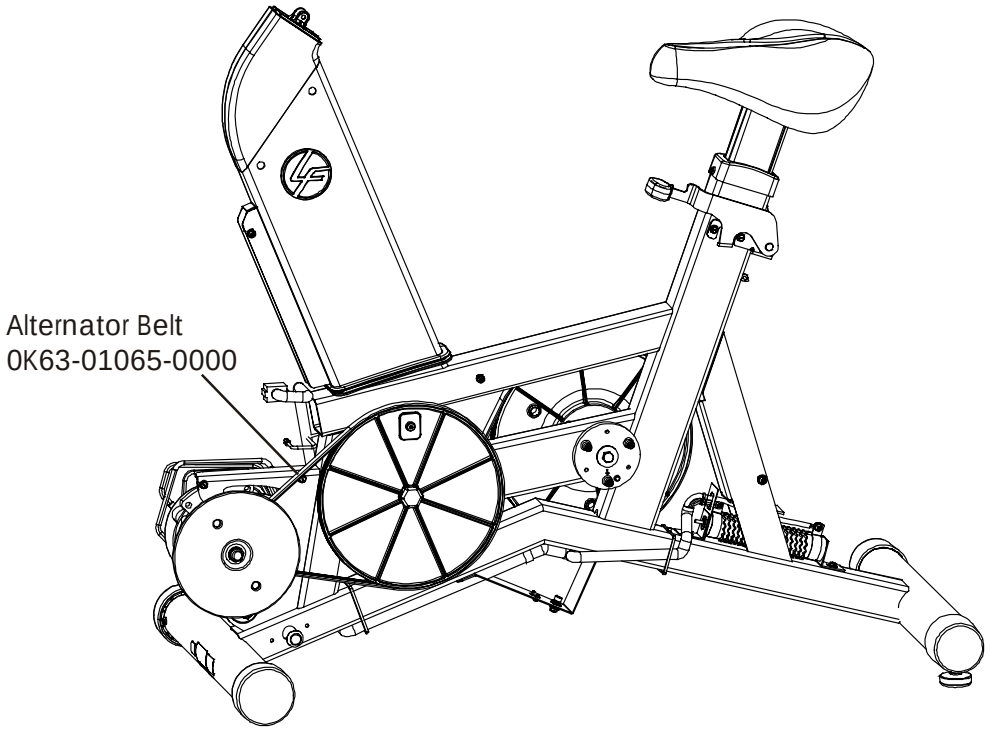
Alternator Belt
0K63-01065-0000

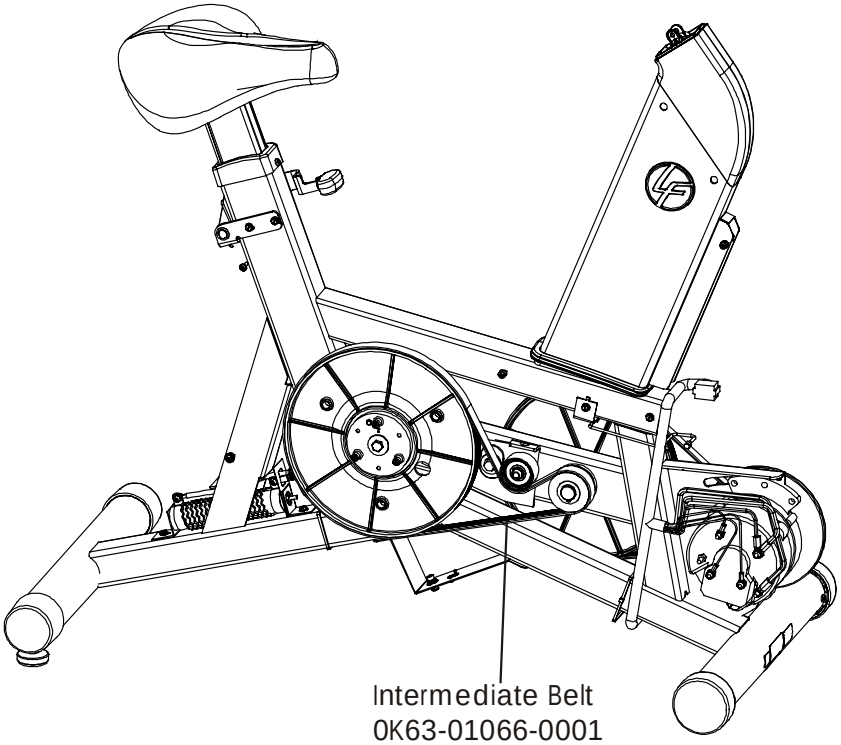
Intermediate Belt
0K63-01066-0001

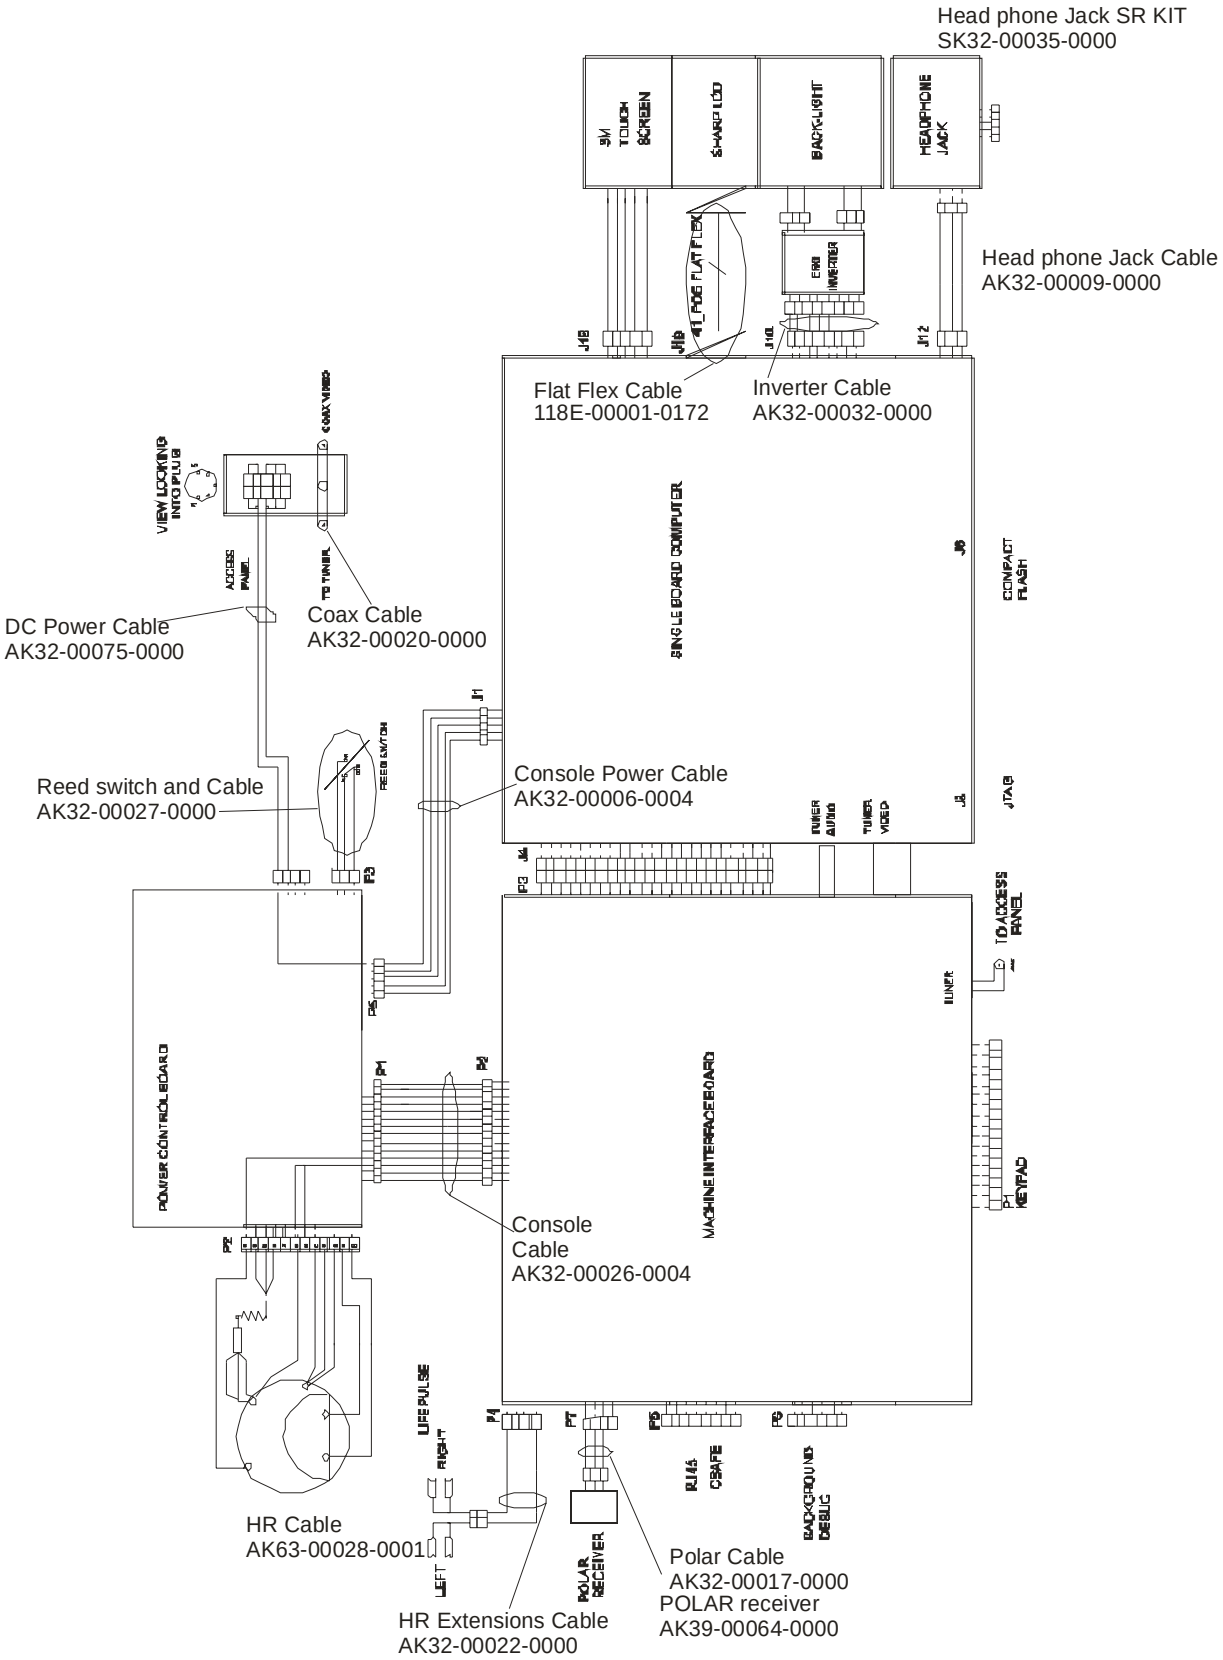
Head phone Jack SR KIT
SK32-00035-0000
Head phone Jack Cable
AK32-00009-0000
Flat Flex Cable
118E-00001-0172
Inverter Cable
AK32-00032-0000
DC Power Cable
AK32-00075-0000
Coax Cable
AK32-00020-0000
Reed switch and Cable
AK32-00027-0000
Console Power Cable
AK32-00006-0004
Console
Cable
AK32-00026-0004
HR Cable
AK63-00028-0001
HR Extensions Cable
AK32-00022-0000
Polar Cable
AK32-00017-0000
POLAR receiver
AK39-00064-0000